

HOSE PROTECTION/SHROUD



Hoses break and couplings break, often very close to the operator and at sensitive areas of the body, such as the abdomen, the arm pit or the neck. These areas are difficult to protect properly. To further improve the safety of the operator, it is recommended to use a Hose Protection/Shroud. The Hose Protection is placed on the hose at the connection to the lance. Closest to the lance, where the hose is most likely to break, there is a 250 mm / 9.8 in. solid steel collar. This provides effective protection for the operator as it has been tested for 3000 bar / 43500 psi. An adjustable strap holds the Hose Protection/Shroud to the lance. The Hose Protection/Shroud is smooth and flexible.



The operator is protected if a coupling or hose breaks.



Swivel for optimal function together with swiveling hose connection.

HOSE PROTECTION Ø 36mm / 1.42 in.

Length	Art. No.	Mod. No.
750 mm/2.5 ft.	5060040	5920
1400 mm/4.6 ft.	5060040	5940
1800 mm/5.9 ft.	5060040	5960

HOSE PROTECTION Ø 47 MM/1.85 IN. SWIVEL

Length	Art. No.	Mod. No.
1400 mm/4.6 ft.	5060050	5942

HOSE PROTECTION Ø 59 MM / 2.32 IN.

Length	Art. No.	Mod. No.
750 mm/2.5 ft.	5060060	5920
1400 mm/4.6 ft.	5060060	5940
1800 mm/5.9 ft.	5060060	5960